


CHECK POINTS FOR WATER INFILTRATION ON MICRO BIRD MBII VEHICLES

1- Check Roof Seams.

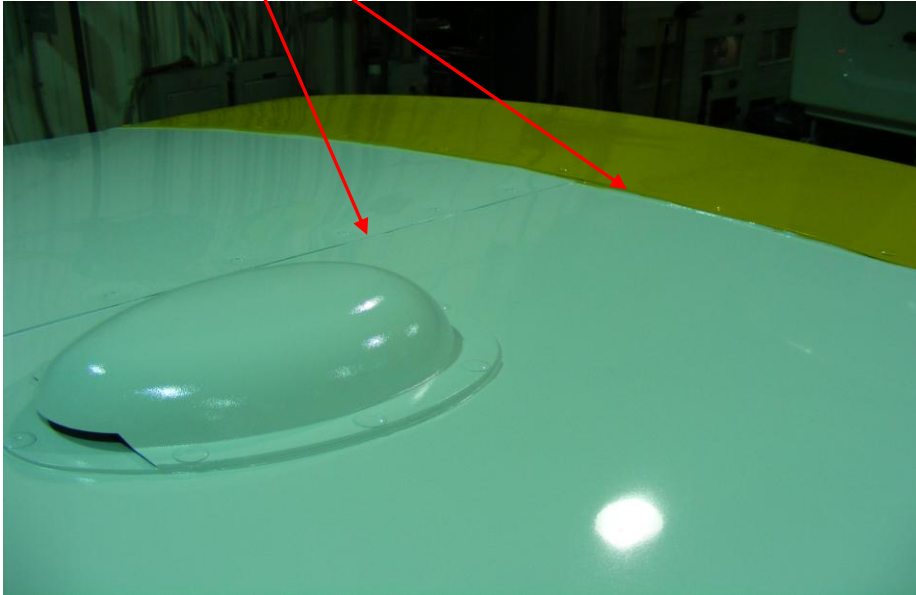

2- Check seams of roof cap in front of gutter on both sides of bus. If sealant is cracked, or has a pin hole, take off sealant at the end of the gutter and put new sealant making sure to fill the space under the roof cap.

3- Check top of steel gutter, corner and rivet on both sides of bus.



4- Make sure area where the roof cap meets the cab is well sealed.

And check end of gutter.



5- Check for loose lights. (If the vehicle has light hoods, you may add sikaflex to the screw holes.)

Make sure inserts are secured onto screws and are not damaged, replace if necessary.



6- When lights are reinstalled, all screws need to be correctly tightened to ensure the insert is properly engaged and offers a good water barrier. If a new light is put in, make sure to put sealant on top of cut off in light gasket and in the wire hole.

